



Layout and Function

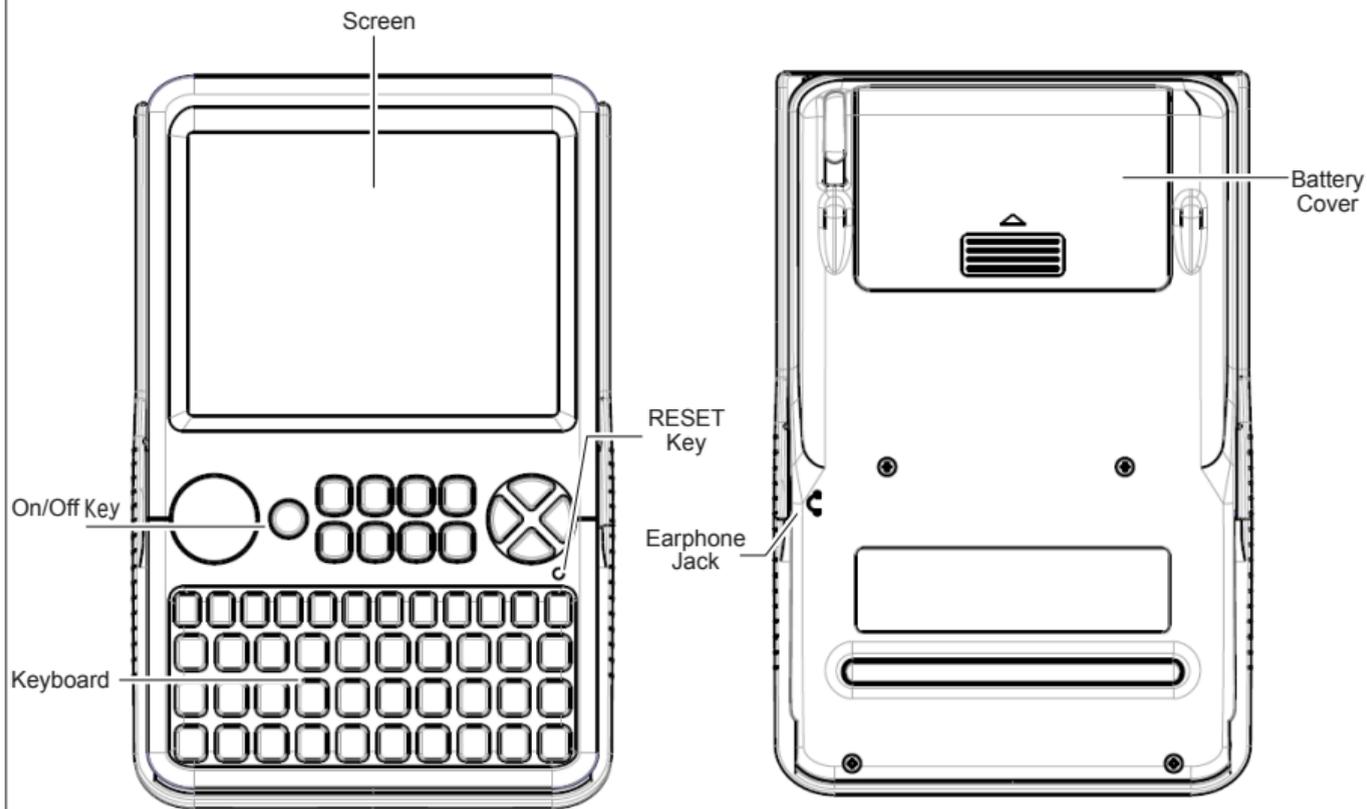

Replacing Battery

Please install the battery before using the device.

Remove the battery compartment cover, Please insert the positive and negative pole of AA Alkaline battery into the right place. and then close the battery compartment cover.

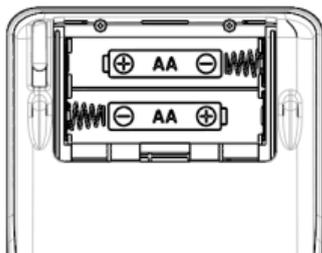

Setting device

After installing the battery, turn on the device, then you could go to 时间 > 世界时间 > 时间设定 to set the localcity, date and time of the device first, if needed.

Setting the local city

Input the first letter or preceding letters of the city's English name and choose the right city in the column. Tap the city's name twice for confirmation.

Setting the date

In the calendar, tap left/right keys to choose the right year and then tap once on the right dateand time. Finally, tap 完成 for confirmation.

Setting the time

Tap the up/down keys to set up the right hours, minutes and am/pm. Finally, tap 完成 for confirmation.

Setting the date and time of device

日期 / 时间设定

日期 今天 完成

公元 2019 1 2 3 4 5 6
7 8 9 10 11 12
己亥年七月初八

本地城市: Singapore 新加坡

日期: 2008/08/08

时间: 8:20am

时间 完成

08 : 08 am

现在

日期 / 时间设定

本地城市: Singapore 新加坡

日期: 2019/08/08

时间: 8:00am



Notes:

- 1 The power is insufficient when just charged, this means the battery is no longer useable. Please get a new one.
- 2 Please use batteries of the same brand, and do not use the old battery with the new one together.
- 3 Please insert the batteries correctly according to the battery box's instruction. Do not mix up the positive and negative pole of AA Alkaline.
- 4 Please take out the batteries if the device will be unused for a long time. Otherwise, the leaked substance may damage the device
- 5 Please dump the batteries according to the local rules.

Main Menu

Provides five types of main menus: 词典、学习、参考、时间、系统

- Press **[MENU]** to return to the main menu.
- Press **[▲]** / **[▼]** key to switch the type of main menu.
- Press the **[ENTER]** key or numeric and letter key to access to the corresponding function items of main menu. You also can press **[▲]** / **[▼]** / **[◀]** / **[▶]** key to choose the items of menu, press **[ENTER]** to access to the applications.
- You could also choose by tapping the "main menu's title" or "functions and application" with the stylus.


☞ Main menu



Stylus Operation

This device provides touch-operation. It includes the following ways:

- **Selection-tapping:** Choose the function on the screen and tap it gently with the stylus. Make sure the stylus leave the screen after tapping.
- **Double-tapping:** Tap twice on the same function.
For example, on the dictionary index tap once means standby, tap one more time means confirmation.

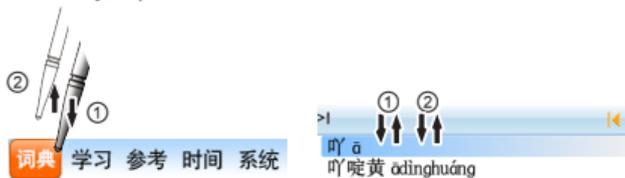

- **Dragging:** Dragging the stylus without its tip leaving the screen. (do not drag heavily)
- **Writing:** The operation of hand-writing input would be described at the latter part.

Input Methods

User input words through keyboard and handwriting recognition mode. Device provides following input methods:

☞ Change the input method

- Press **[IMS]**, and the input method's menu would show on the screen. Press numeric key or just tap the input method which you want to choose.

☞ Smart Pinyin

- Press alphabet keys to input the smart pinyin.

For example, inputting "WM", you could get "我们、外面、文明..."

- Press or to look up more Chinese phrases.
- Press numeric keys to input the standby Chinese phrase.

Radical Strokes

- Select the number of strokes, press or to view the standby radical strokes, and select the one you want directly.
- Select the remaining number of strokes, press or to view the standby words, and select the word directly.

Total Strokes

- Select the number of total strokes, press or to view the standby words, and select the word you want directly.

Chinese Handwriting Recognition Input

- There are multi-box/single box/full screen for handwriting.
- Write in the box on the screen by stylus, and take up the stylus, waiting for the recognition.
- Choose the word you want by tapping it.

namely delete the cursor's right&left character or select the string of characters


namely confirm operation or shift line

switch multi box /single box for handwriting

switch single box/full screen for handwriting



Full Screen Handwriting

Write on the whole screen.

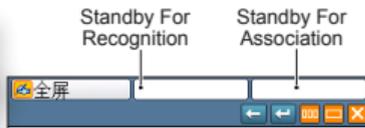

Single Box Handwriting

Write the single character on the handwriting box.

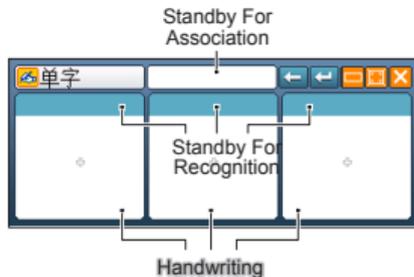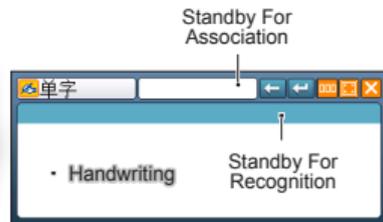

Multi-box Handwriting

Write the single character on each handwriting box.

① Write on the screen ...

吖 ā
 吖啞黄 ādinghuáng
 吖嗒 āqin
 阿 ā
 阿! ē
 阿? ē
 阿Q ā Q



> 你 ② Then, wait for a while ...

你 nǐ
 你们 nǐmen
 你来我往 nǐ lái wǒ wǎng
 你死我活 nǐ sǐ wǒ huó
 你追我赶 nǐ zhuī wǒ gǎn
 你 nǐ
 你 nǐ



Word Searching

Take *The Standard Dictionary of Contemporary Chinese* as an example to illustrate the method of searching a word.

- Words in alphabetical order in the index screen.
- If you know clearly the word's spelling, you could input the word and press **[ENTER]** key to search.
- If you are not sure of a word's spelling, you could use Wildcard Search. Input all the letters you know, and then replace the unknown letters with "?" or "*". "?" stands for an unknown letter. "*" stands for a string of unknown letters.
- You can cross search the words in explanation screen: press **[▶]** to mark the word, press **[▲]** / **[▼]** / **[◀]** / **[▶]** to highlight the words from the marked word, or just tap the word you want to highlight. Press corresponding keys to view the explanation of highlighted words.
- Press **[Ⓜ]** to adjust the font size.

Input 『安之若素』 and press **[ENTER]** key to search:

> 安之若素

安之若素 ānzhī-ruòsù	安之若素
安乐 ānlè	安之若素 (遇到)
安乐椅 ānlèyǐ	异常的 (遇到不顺利的或异常的情况) 能
安乐死 ānlèsǐ	情平静 心情平静, 就像平常一样 ④ 身处
安乐窝 ānlèwō	一样 ④ 逆境, 他安之若素, 仍潜心于科学
安于 ānyú	境, 他研究。
安享 ānxiǎng	仍潜心
安全 ānquán	究。

请输入汉语拼音

主词 笔顺

Input 『—?—?』 and press **[ENTER]** key to search:

> —?—?!

不明字查询

一丁点儿 yīdīngdiǎnr	1 一举一动
一下 yīxià	2 一五一十
一不做, 二不休 yībùzuò, èryībùxiū	3 一唱一和
一专多能 yīzhuānduōnéng	4 一字一板
一世 yīshì	5 一家一户
一丘之貉 yīqiūzhīhé	6 一张一弛
一丝 yīsī	7 一心一德
	8 一心一意
	9 一时一刻

请输入汉语拼音

Highlight 『异常』 and press **[现规]** to view the explanation

安之若素

ānzhī-ruòsù

异常

(遇到不顺利的或异常的心情平静, 就像平常一样) 逆境, 他安之若素, 仍潜心研究。

异常 yìcháng

① 不同平常 ④ 情况异常|异常的表情。

② 非常; 特别 ④ 异常沉重|异常艰苦。

现规 笔顺

主词 笔顺

- **Pronunciation:** press **[TALK]** key to listen to the pronunciation of highlighted words in index screen; and press **[TALK]** key to listen to the full-text pronunciation in the explanation screen.

- Highlight the word in explanation screen, and press **笔顺** to open function of Chinese character stroke learning.

安之若素

ānzhī-ruòsù
 (遇到不顺利
 心情平静, 就
 逆境, 他安之
 研究。)



现规

笔顺

Chinese Learning

Provides some functions of Chinese learning, such as: PinYin, strokes, standard radicals, characters structure, punctuation mark, Chinese classifier.

PinYin Learning

- Press **▲**/**▼**/**◀**/**▶** to choose or just tap the PinYin in the PinYin list, press **ENTER** key or tap the selected PinYin to put it in the search column.
- Press **ENTER** key or tap **确定** to access to the search screen.
- Input PinYin in search screen, and press **ENTER** key to access to the PinYin learning screen.
- Press **1**~**6** key or tap **🔊** to listen to the pronunciation of PinYin in the PinYin learning screen, and tap **规则** to view the pronunciation rules; tap **韵母** to listen to the finals of PinYin; tap **整字** to listen to PinYin of all words.

Study PinYin 『cang』


Data of CALC menu

CALC menu includes functions of Di Zi Gui, San Zi Jing, Hundred Family Surnames, etc.

Di Zi Gui

- Press **▲**/**▼** key to view the content by sentence. Or you can just tap the sentences on the screen directly.

- Press key to page up/down to view the content.
- Tap **章节** to selected chapters.
- Tap **释义** or the highlighted sentence, or press **ENTER** key to view PinYin, comment and translation of content.
- Tap **朗读** to listen to the pronunciation of content; tap **停止** to stop auto reading.
- Tap **搜索** to access to search screen, input keyword and tap **Q** or press **ENTER** key to search.

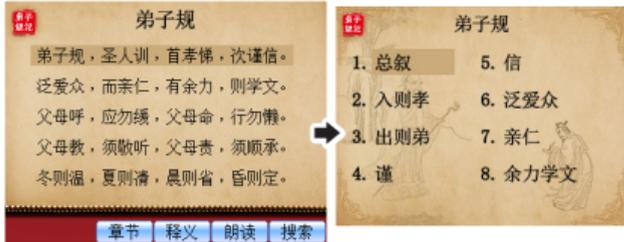

- In the translation screen, tap **拼音+** to view the PinYin, and tap **拼音-** to hide PinYin; tap **朗读** to listen to the pronunciation of the content, and tap **停止** to stop; tap to listen to the sentence before it; tap the word to highlight, and tap the highlighted word again or tap **现规** to view its explanation.



TIME

Time menu includes functions of World Time, Timer, Stopwatch and Calendar.

- **World Time** View and set time and date.
- **Timer** Timer is a Countdown tool.
Press to access to the time adjustment of status, press to adjust hours, minutes, seconds. After adjustment, tap **开始** to start the countdown.
- **Stopwatch** Press **开始** to begin timing.
- **Calendar** Provides comparison of the lunar calendar and the solar calendar from 1901 to 2099. Press key to set the year, press to set the month, press to set the day.



You could also tap the screen directly to run the functions.

Device Setting

Time & Date	Our device's initialized time is 2088/08/08 8:08am. If you want to change this setting, you can open the 时间 > 世界时间 window, and then choose 时间设定 .
Volume	You can press key to set up the volume, speed; or set in 系统 > 音量 / 亮度
Contrast	You can press key to adjust the contrast; or set in 系统 > 音量 / 亮度

Auto Power Off	Our device's initialized auto power off time is "five minutes later power off automatically". If you want to change this setting, please open the 系统 > 关机时间 .
Battery	Check the battery capacity in 系统 > 电池电量 .
Word Size	You can press 🔍 key to adjust the size of the word.

Attention

Touch Panel & Display To protect the screen from being scratched, use only the stylus that comes with this product. When cleaning, rub the screen lightly with dry, clean and soft cloth (do not use volatile liquid). The screen may crack if the product falls on the ground.

Battery Keep the battery far from the fire. Otherwise, there is a risk of explosion. Do not connect the battery's terminals together to avoid short circuit.

Earphone The sound volume of the earphone should be not too high so as not to injure your hearing.


Non Waterproof The device is non waterproof. Please keep it away from any liquid. If it gets wet, please dry the surface and send to our service center for checking.

Usage of the Protecting Cover

👉 Take off


- Hold the bump place of the cover with right hand, and push/slide it to the left along the sliding rail.

When slide the cover to the end of the rail, you can take off it easily.

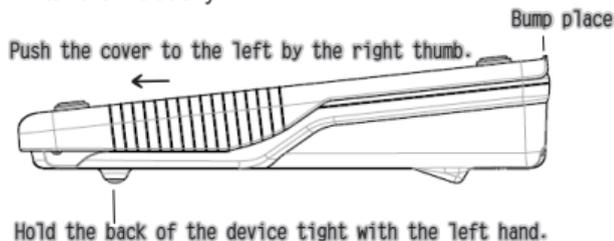


👉 Refit

- Put the cover on the screen and slide it to the sliding rail until hearing a click.

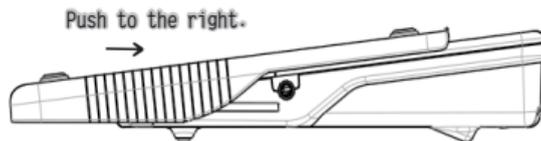


👉 Under the Device


- Hold the cover with the left hand, and put it under the device (screen up).

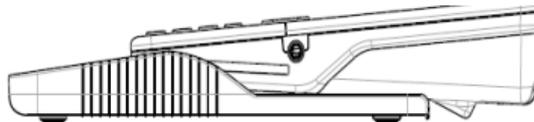

- Hold the device with the right hand, and slide it flat to the right along the sliding rail.

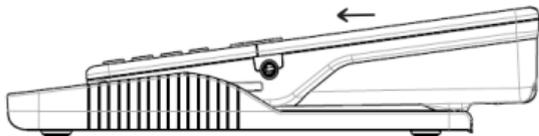

- Then push the cover to the end until hearing a click.

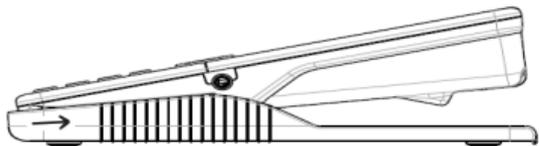

Maintenance

- Keep it dry. Precipitation, humidity and liquid that contains minerals will corrode electronic circuits.
- Do not use or store it in dusty, dirty areas as its detachable parts may be damaged.
- Do not store it in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and melt certain plastics.
- Do not store it in cold areas. When the device warms up, moisture can form inside it, which may damage electronic circuit boards.
- Do not attempt to take the device apart. Improper handling may damage the device.

- Do not drop, knock or shake it. Improper handling may cause damage to the liquid crystal panel.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint it. Paint can clog the device's detachable parts and cause it to malfunction.
- Do not operate the device below the temperature 0 or over 40 degrees. Excessive heat or cold will cause malfunction and incur damage to the device. To avoid such from happening, please do not use the device for two hours after it has been exposed to excess heat or cold, because the humidity or moisture formed by the temperature changing will cause damage to the device.



We are obliged to charge user maintenance fee if the product is damaged due to liquid percolation, improper placement of the product (such as eroder by moths), or breakage on the screen (such as screen scratching or breaking) such man-made damages.



If the position of the touch panel's pen point is too shifted to control the screen with the stylus, you can use the stylus to poke the RESET key (Or remove the battery and install the battery again after 1 minute), then long press the power button to enter the pen point calibration screen when the host is powered on.